Installation/Operating Instructions 220V Signature/Series E & V Electric Projection Screen

These Installation/Operating Instructions are available in the official language of the country where you purchase the product. Please contact your distributor to request a copy.

Vous pourriez demander les instructions d'installation et d'opération traduises dans la langue officielle du pays ou vous achetez le produit. Veuillez demander à votre distributeur.

Die Gebrauchsanweisung für Installation und Konstruktion sind in der offiziellen Sprache des Landes, indem Sie das Produkt gekauft haben, vorhanden. Fragen Sie die jeweilige Verkaufs-Abteilung.

Caution

- ① Read instructions through completely before proceeding.
- 2 Follow instructions carefully. Installation contrary to instructions invalidates warranty.
- ③ Entire bottom of screen case should be unobstructed to permit proper operation of automatic trap door, and access to bottom panel for making electrical connections or servicing.
- ④ Screen should be installed level (using a carpenter's level).
- ^⑤ Nothing should be fastened to screen dowel, viewing surface or automatic trap door.
- [®] Operating switch(es) is packed separately in screen carton. Do not discard with packing material.
- ⑦ Screen operates on 220V, 50 Hz. current.

NOTE: Screen has been thoroughly inspected and tested at factory and found to be operating properly prior to shipment.

These instructions are meant as a guide only. They do not imply any responsibility on the part of Draper, Inc. for improper installation or faulty workmanship at the jobsite.

Hanging Screen

When locating viewing surface and checking clearance for screen's operation, remember that the surface is centered in case. Screen is normally recessed above ceiling and may be installed in a variety of ways. See details on back of this sheet. Regardless of mounting method used, the following points apply:

- ① Screen should be positively and securely supported so that vibration or even abusive pulling on viewing surface will not weaken installation.
- 2 Installer must insure that fasteners used are of adequate strength and suitable for the mounting surface chosen.
- (3) Entire bottom of case must be readily accessible after installation.
- ④ The hinge that connects bottom panel and automatic trap door of screen must be permitted to operate freely. Front and back of case must be straight-not forced to warp or bow. Hinges must be free from mastic or paint buildup, and doors must be unobstructed by ceiling tiles.
- ⑤ Do not use screen case to support adjacent sections of ceiling.
- ⑥ If trim pieces must be attached to case, do not permit screws to protrude more than 6.35 mm through 3.2 mm wall of case. Do not attach trim pieces with nails.
- If case is painted, slots on bottom of case should be shielded to protect viewing surface from paint splatters or overspray.
- Do not seal unit in ceiling until electrical connections have been made and (8) screen has been operated successfully.

Electrical Connections

Screen operates on 220V., 50 Hz., 1 ph. current. Junction box is located just above the access plate at left end of screen. Access plate is held closed with flathead screws and may be opened with a Phillips screwdriver. (Automatic trap door does **not** need to be opened to make field connections.) Removal of access plate exposes terminal strip, per wiring diagram on reverse. Screen is shipped with internal wiring complete and control switch(es) fully boxed.



411 S. Pearl St., Spiceland, IN 47385 USA 765-987-7999 fax 765-987-1689 e-mail draper@draperinc.com <a>www.draperinc.com Copyright © 2006 Draper Inc. Form Signature220V_Inst06

Wire connecting screen to switch(es) and switch(es) to power supply should be furnished by installer. Connections should be made in accordance with attached wiring diagram, and wiring should comply with National and local electrical codes. All operating switches should be "OFF" before power is connected.

Operation

CAUTION-Important Instructions-Signature/Series V-The shipping support brackets must be removed from each end of dowel during initial operation before screen is operated in UP direction. After screen is installed, run



viewing surface DOWN to access screws that hold brackets to dowel. Loosen hex head screw, remove bracket and retighten screw at each end of dowel. Signature/Series E-The protective paper wrapping around the viewing surface must be removed before the screen is operated in down direction. Cycle viewing surface down and up several times to confirm satisfactory operation. If viewing surface or trap door do not operate properly, turn power off and free trap door and/or check electrical connections.

220V Single Station Control-3-position UP-OFF-DOWN switch permits operation to be stopped at any point. Factory set limit switches automatically stop screen when fully down or fully up.

220V Multiple Station Control (Not CE Approved)-Switches are similar in appearance to Single Station Control. Screen stops when switch is released and may be restarted in either direction. Factory set limit switches stop screen automatically when fully up or fully down.

24V Control-Three-button UP-STOP-DOWN switches stop at any point desired, operate in any sequence. Factory set limit switches automatically stop screen when fully up or fully down. Wireless controls-whether infrared or radio frequency-interface with low voltage control box.

Kev Operated Switching (Not CE Approved)-Two kinds of key-operated switches are optionally available with this unit. 1) The key-operated power supply switch controls power to the screen and switches. When it is "off", the switches will not operate screen. Key may be removed from the switch in "on" or "off" position. 2 A three-position key switch permits the screen to be operated directly by key. In this case, the screen's operator must have a key. RS232/Ethernet-Serial communication and network communication optionally available with wall switches, RF or IR remote.

Adjustments

Screen has been factory set and should not require further adjustment. However, if you wish to change the "up" and "down" stopping positions, proceed as follows:

CAUTION: Be sure all switches are in "off" position before adjusting limit switches. Always be prepared to shut screen off manually when new adjustment is being tested. Screen may be severely damaged if viewing surface is allowed to run too far up or too far down.


Adjusting "Fully Up" Position—"Up" stopping position may be adjusted by turning the yellow llimit switch adjustment socket. The yellow socket is located on left end of screen roller and is accessible to a screwdriver/Allen wrench (4mm or 5/32"). Turning the socket counterclockwise will allow the viewing surface to retract further into the case. Turning it clockwise will cause the surface to stop further out of the case. One full revolution of the socket will alter the stopping position of the viewing surface by approximately 3.8 cm.

Adjusting "Fully Down" Position-"Down" stopping position may be adjusted by turning the white limit switch adjustment socket. The white socket is located on the left end of screen roller and is accessible to a small flat screwdriver/Allen wrench (4mm or 5/32"). Turning the socket counterclockwise will allow the viewing surface to run farther down. Turning it clockwise will shorten the viewing surface, causing it to stop in a less extended position. At no time should viewing surface be unrolled enough to expose any part of the screen roller.

Please note: See page 2 for information on adjusting Tab-Tensioning cables on Signature/Series V screens.

> If you encounter any difficulties installing or servicing your Signature screen, call your dealer or Draper, Inc. Spiceland, Indiana, U.S.A., (765) 987-7999, FAX (765) 987-1689, or e-mail to draper@draperinc.com.

Printed in U.S.A.

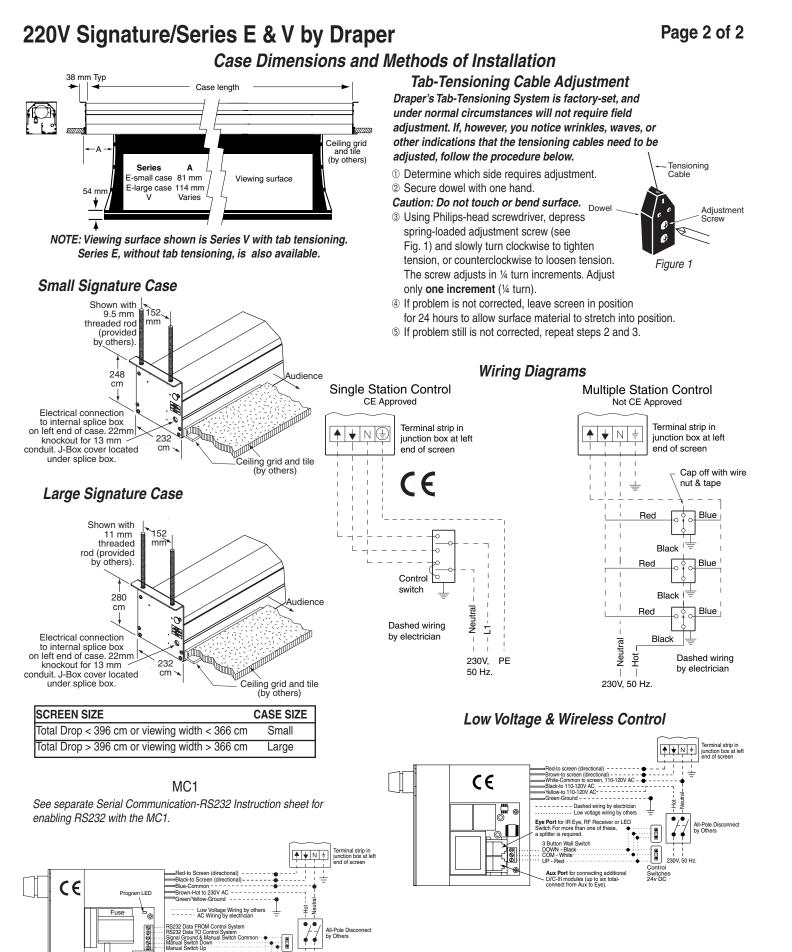

Manual Switch Up Eye Port for IR Eye. For RF Receive or LED Wall Switch, a Splitter and a Power Supply is required. Plug RF Receiver or LED Wall Switch and Power Supply into splitter, then run cable from Splitter to MC1 Eye Port.

MC1

Control Switche 230V. 50 Hz